

Operating Instructions:

- This grease is for use with pneumatic tools only.
- Leakage may occur after grease is applied. This is normal and simply wipe away any excess grease.



1. Remove cap and open the grease tube with a blade or scissors



2. Fill to the tool specific mark:"1" (3g) for NC-4650H, "2" (5g) for NC-4233QH & NC-4255QH. Insert the plunger. Do not remove the applicator cap at this step.







While holding the front of the applicator, shake it to move trapped air to the front. Remove the applicator cap. Push the plunger forward slowly to release air.



4. Inject grease into the anvil grease hole. Wipe away excess grease.



5. With basic daily use, the service interval is typically 90 days*.

CONTACT INFO:

Horizon Tool, Inc. 7918 Industrial Village Road Greensboro, NC 27409

PH: 1-800-537-1077 Fx: 1-800-537-1717

Email: info@m7-us.com www.mighty-seven.com

* Mechanical use 90 days, industrial use 30 days or loss of power for either.